

868 Series Undermount Hardware Kit

Installation Instructions

Drain/plate assembly mounts from top-side of the roof deck.

No under-deck clamp necessary - Kit allows the drain to be fastened directly to deck plate


Always be aware of, and follow local plumbing codes

Failure to follow these instructions could result in personal injury or property damage

Set drain on flat surface with outlet facing up.

Flip the sump receiver and set it over the bottom of the drain, face down - flange of drain will align with recess of sump receiver.

Align the four shallow cut-outs in the opening of the sump receiver with the four threaded lugs on the underside of the drain.

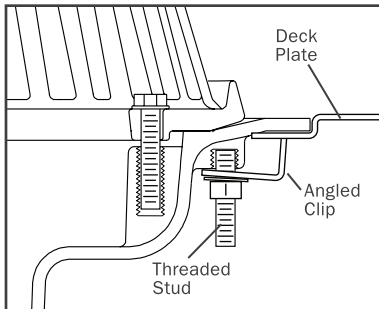

Install and tighten threaded studs in each of the lugs.

Slide the angled clips over the threaded studs with leg facing down toward sump receiver

Install washer then nut on each stud and tighten alternately until sump receiver is secured in place.

Install drain and sump receiver assembly into opening on roof and securely attach sump receiver to roof deck.

Supply

Drainage

Support

Specialties

www.siouxchief.com

14940 Thunderbird Road
Kansas City, MO 64147
P 1.800.821.3944
F 1.800.758.5950

