



Installation Instructions

868-15EXT Threaded Extension Kit


Dome
(included with drain)

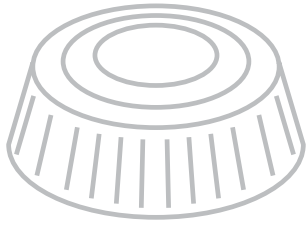


Clamping Collar bolts & Washers
(1.25" Replacement parts are included with extension kit)

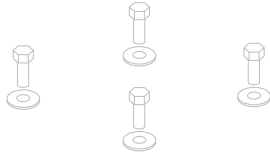


Clamping Collar
(included with drain)

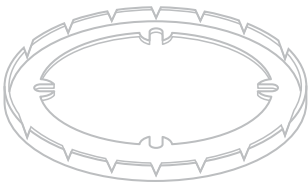

Threaded Extension

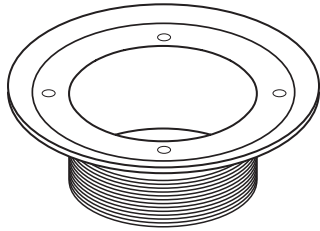


Extension Collar bolts & Poly Washers
(1.75")

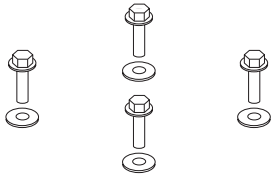


O-ring for Extension Collar




Extension Collar

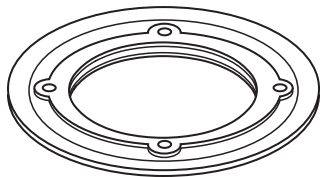

Extension Collar Gasket

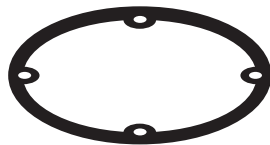

Drain Body
(included with drain)

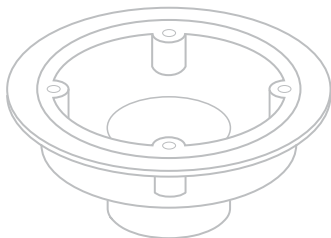

868-15EXT

Remove dome and collar from drain body and retain for later assembly.

Place Extension Collar Gasket flat on drain body, aligning the four holes in the gasket with the four bolt holes in drain body. Be sure gasket area on drain body is free of debris.

Align extension collar with gasket and drain body, marking side up. Using four 1.75" bolts and four white poly washers, attach extension collar (hand-tight only) to drain body - white poly washers should be placed between top side of extension collar and bolt heads.

Lubricate Generously. Using lube provided, lubricate female threads of extension collar. Lubricate o-ring, and insert into center groove in female threads of extension collar. Lubricate male threads of threaded extension. Assemble the threaded extension into extension collar and adjust to desired height.

Tighten four extension collar bolts with wrench.

Install waterproofing roof liner over the top of, and to inside diameter of threaded extension.

Align clamping collar with threaded extension and attach using four 1.25" bolts and galvanized washers.

Tighten collar bolts with wrench and install dome strainer.