



# StrongArm™ with ShowerWallNut™ LockBlock™


## »» Instruction Sheet

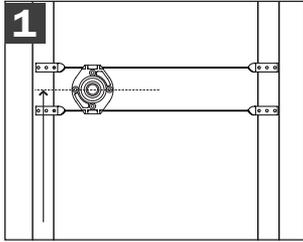


1 Determine stub out height.

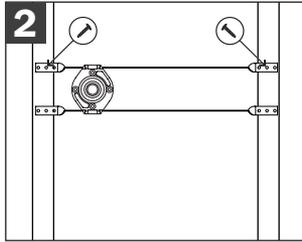


2 Secure top bracket to face of stud bay at desired position for shower arm stub out.

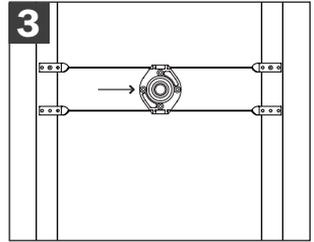


3 Slide LockBlock across bracket.

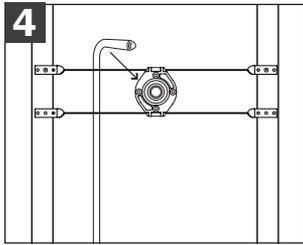


4 Insert copper shower riser ell into LockBlock.

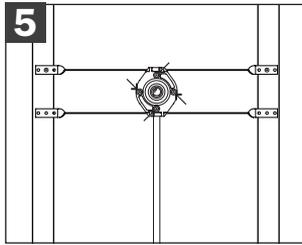


5 Install screws into all four screw holes and tighten. Block will compress around copper and on brackets to prevent lateral movement.

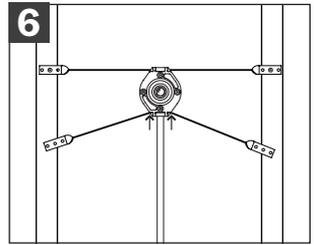

6 As close as possible to each side of block, bend the bottom bracket downward. Bending the bottom bracket provides the most rigid installation.

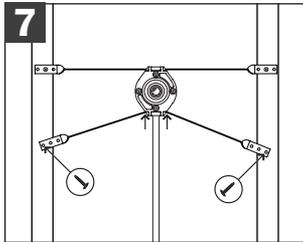

7 Secure ends of bottom bracket to studs.

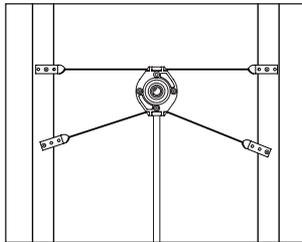

Installation complete

⚠ **WARNING:** Cancer and Reproductive Harm

[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

Patent No: 8,061,390

#IS-525-WLB 9-20

Supply

Drainage

Support

Specialties

[www.siouxchief.com](http://www.siouxchief.com)

14940 Thunderbird Road  
Kansas City, MO 64147  
P 1.800.821.3944  
F 1.800.758.5950

